

Contents

Cut-through forwarding commands 1
 cut-through enable 1

Cut-through forwarding commands

cut-through enable

Use **cut-through enable** to enable cut-through forwarding.

Use **undo cut-through enable** to disable cut-through forwarding.

Syntax

cut-through enable

undo cut-through enable

Default

Cut-through forwarding is disabled.

Views

System view

Predefined user roles

network-admin

Usage guidelines

A cut-through forwarding-enabled device forwards a frame after it receives the first 64 bytes of the frame. This feature reduces the transmission time of a frame within the device and enhances forwarding performance.

A frame is forwarded before its CRC field is received, and thus CRC-error frames are forwarded instead of being dropped.

Examples

Enable cut-through forwarding on the device.

```
<Sysname> system-view
```

```
[Sysname] cut-through enable
```