

# Contents

- User profile commands ..... 1
  - display user-profile ..... 1
  - user-profile ..... 2

# User profile commands

## display user-profile

Use **display user-profile** to display configuration and online user information for user profiles.

### Syntax

```
display user-profile [ name profile-name ] [ slot slot-number ]
```

### Views

Any view

### Predefined user roles

network-admin

network-operator

### Parameters

**name** *profile-name*: Specifies a user profile by its name, a case-sensitive string of 1 to 31 characters. Valid characters include English letters, digits, and underscores (\_). The name must start with an English letter and must be unique. If you do not specify this option, the command displays configuration and online user information for all user profiles.

**slot** *slot-number*: Specifies an IRF member device by its member ID. If you do not specify a member device, this command displays user profile configuration and online user information for all member devices.

### Examples

# Display configuration and online user information for user profile **aaa**.

```
<Sysname> display user-profile name aaa
  User-Profile: aaa
    Inbound:
      Policy: p1

  User user_1:
    Authentication type: 802.1X
    Network attributes:
      Interface      : Ten-GigabitEthernet1/0/1
      MAC address   : 0000-1111-2222
    Failed action list:
      Inbound: Policy p1
```

**Table 1 Command output**

Field	Description
User-Profile	User profile name.
Inbound	Policy applied to incoming traffic.
Outbound	Policy applied to outgoing traffic.
Policy	Policy name.

Field	Description
User user_1	Username of a user account with which a user profile is associated.
Authentication type	Authentication type: <ul style="list-style-type: none"> <li>• <b>802.1X</b>—802.1X authentication.</li> <li>• <b>Portal</b>—Portal authentication.</li> <li>• <b>PPP</b>—PPP authentication.</li> </ul>
Network attributes	Online user information.
Failed action list	Actions that failed to be applied to the user.

## user-profile

Use **user-profile** to create a user profile and enter its view, or enter the view of an existing user profile.

Use **undo user-profile** to delete a user profile.

### Syntax

```
user-profile profile-name
```

```
undo user-profile profile-name
```

### Default

No user profiles exist.

### Views

System view

### Predefined user roles

network-admin

### Parameters

*profile-name*: Specifies a user profile by its name, a case-sensitive string of 1 to 31 characters. A user profile name can only contain English letters, digits, and underscores (\_), and it must start with an English letter. The name must be unique.

### Examples

# Create user profile **a123** and enter the view of **a123**.

```
<Sysname> system-view
[Sysname] user-profile a123
[Sysname-user-profile-a123]
```